



■ Change HDMI/VGA ← Change the resolution/back

Freeze
 Rotate
 Power on/off

3. Software download

- ★ Compatible with Mac/Chrome/ Windows XP and above
- Software download:

https://www.edis-audio-visual.com/

★ Detailed Instructions: https://www.edis-audio-visual.com/

4. Device connection

PC Connection

1.Plug in the power adapter to the power socket and Document Camera.
2.Connect the USB cable to the PC and Document Camera.

 
3.Install the software.



03

PC-free

- 1.Plug in the power adapter to power socket and Document Camera.
- Connect the HDMI/VGA cable to the Document Camera and Touch screen.
- 3.Connect the USB cable to the Document Camera and Touch screen (touch usb port).



Document Camera and external equipment connections as below:

Document Camera Interface	Connection Cable	Display Interface
HDMI_OUT		HDMI_IN
HDMI_IN	HOM HOM	HDMI_OUT
VGA_OUT		VGA_IN
VGA IN		VGA OUT

04

5. Attention

Before use:

- Do not leave it under direct sunlight or by heaters. It maybe discolored or damaged.
- Do not place this product in any humid, dusty, or vibrating locations.


01

- Carry the product by holding the base in both hands. Never hold the product by the arm or the camera head.
- Use a soft, dry cloth for cleaning instead of any volatile solvent.
- When the device is not in use for a while, please turn off the power.
- Fold the arm when the product will not be used for a long time.

During use:

- Please prevent children from operating the device without supervision.
- Recommended environmental conditions: Temperature: 0°C 40°C (32°F - 104°F).
- Humidity: 30% 85%(No condensation).
- Use the product on a stable base, desk, or table.
- Do not turn or flip the camera head or arm to its limitation as below manual instructs.
- Do not point the camera lens directly at the sunlight. It may be damaged and fails to image.
- Do not look directly to the LED lamps to prevent your eyes from being damaged.
- The product may not be operated properly if a USB hub is used to connect the product and a PC.
- Be careful to prevent the unit from dropping or overturning
- Please prevent the camera head to hit the desk top or any other hard objects, or it can be damaged easily.

Precautions for operation

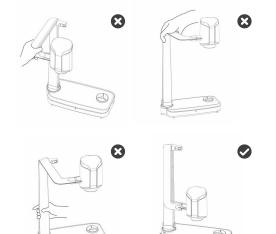

Note:

Do not grasp the the lens, arm or joints when picking up the device. Please use both hands to hold the bottom of the device. Handling the device improperly may cause mechanical malfunctions.

05