 


**Edis**

# Live Media Kit User Manual




# Key description

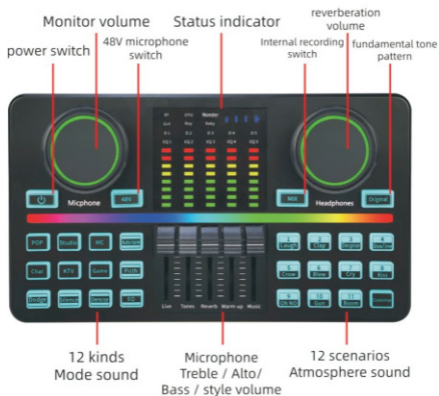

## matters needing attention

1. If the product is abnormal, please do not use it without permissionDisassemble and repair
2. Do not place the product in damp, high temperature In harsh environments such as oil pollution, Avoid extreme environments such as direct sunlight and rain
3. Do not throw the product to avoid falling damage
4. Select the adapter with output DC5V for charging

## Jack description

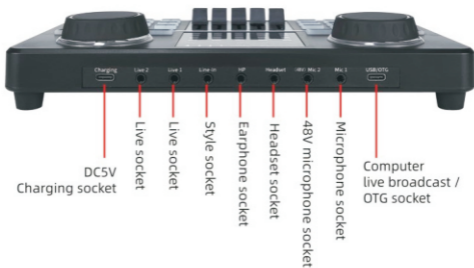

Microphone hole: connect condenser microphone

48V microphone hole: connect 48V condenser microphone (turn on 48V switch when using)

Accompaniment hole: connect the mobile phone or computer through the accompaniment cable to play accompaniment music

Headset hole: connect the headset

Headphone hole: connect headphones


Live hole: connect recording / live phone

Charging hole: connect the USB charging cable to charge the sound card,

Charging input 5v-1a (charging power indicator light jumps, full and static)

Computer live hole: use the charging data cable to connect with the computer for computer live sound card, and use the special OTG connection cable to connect with the mobile phone (for mobile phones without earphone jack / supporting OTG)


# Mobile connection

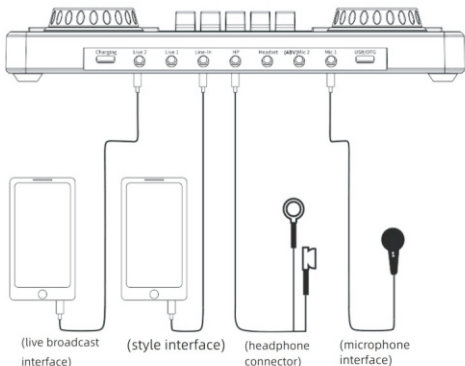

- 1) Press and hold the power button to power on
- 2) Use the recording cable equipped with this machine to connect the "live broadcast" connection interface of the product to the headset interface of the live phone
- 3) Connect the "style" connector of the product to the headset connector of the style phone by using the style cable equipped with the machine
- 4) Insert the microphone into the "microphone" socket; Plug the headset into the "headset" socket
- 5) Switch different user scenarios according to the needs of users; If you sing songs during live broadcast, you can switch to "popular" or "professional" or "shouting" mode. At this time, the microphone effect is professional reverberation sound effect
- 6) Turn on the accompaniment mobile phone, select the appropriate accompaniment, and adjust the "microphone" volume and "monitoring" volume at the same time to match the microphone with the accompaniment volume appropriately
- 7) Open the mobile phone's "Yingke", "Zanthoxylum bungeanum", "YY" and other live app to open the cool mobile phone live experience

Warm tip: the sound card has Bluetooth receiving function. Users can play accompaniment music and sound effects through Bluetooth connection

# Computer connection

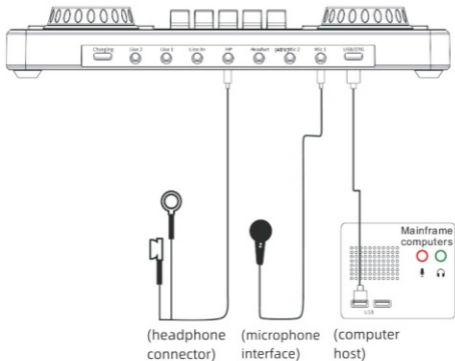

- 1) Press the power button to power on
- 2) Use the charging cable equipped with this machine to connect the "computer live broadcast" connection interface of the product to the USB interface of the computer
- 3) Plug the headset into the sound card "headset" connector
- 4) Plug the microphone into the sound card "microphone" connector
- 5) Switch different user scenarios according to the needs of users; If you sing songs during live broadcast, you can switch to "popular" or "professional" or "shouting" mode
- 6) Open the computer-side live broadcast app software to start the cool live broadcast experience

## technical parameter

---

Frequency response: 100Hz-20KHz

SNR: > 65dB

Shutdown current: 50 $\mu$ a

Battery Specification: 3.7V 1500mah

Charging input: 5v-1a

Headphone output: 32  $\Omega$  10MW \* 2

Style input:  $\leq$  600mV

MIC input: - 42db 3dB

# common problem

---

1. Power on light is not on
  - 1) Determine whether the power is enough. Try charging for 2 hours and try again
2. There is noise or no sound when using the headset
  - 1) Please try plugging in the headset again or plug in the headset before turning on
  - 2) Please use American standard headset
3. Noise heard during live broadcast
  - 1) Reduce the volume of the mobile phone system appropriately during Apple Mobile live broadcast
  - 2) Check that the headset or microphone is fully plugged in
4. Play music without sound
  - 1) Check whether the device is successfully connected to the mobile phone
  - 2) Check whether the headset or headset is correctly connected to the device interface
  - 3) Check whether the mobile phone has played normally. You can exit and reopen the playback software to see whether it returns to normal
  - 4) Check whether the monitoring volume of the device is adjusted to the minimum. At this time, adjust the monitoring volume of the device to see whether it returns to normal
  - 5) Check whether the volume of the mobile phone is adjusted to the minimum. At this time, adjust the volume of the mobile phone to see whether it returns to normal
5. Unable to listen to the microphone
  - 1) Check whether the microphone or headset is correctly connected to the device interface
  - 2) Check whether the microphone volume or monitoring volume is turned down. At this time, adjust the corresponding volume to see whether it returns to normal
6. The sound input by the microphone has no reverberation effect or the sound recorded by the Karaoke software has no reverberation effect
  - 1) Check whether the device is adjusted to the appropriate scene. Try switching it to "singing" or "studio" mode and try again