


Edis

Electronic Drum

USER MANUAL

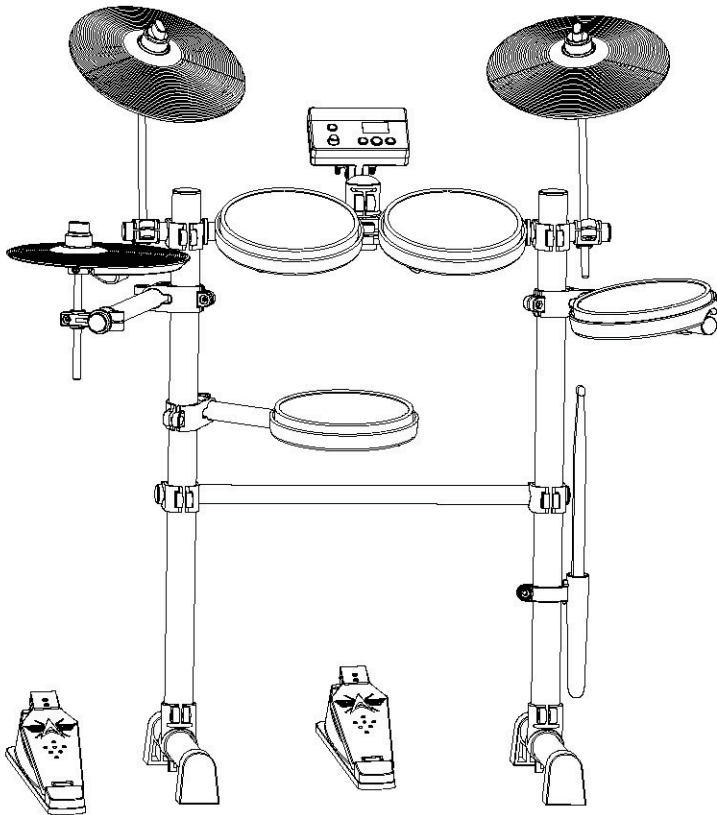

MADE IN CHINA

Please assemble following **ASSEMBLY DIRECTORY** steps, and then read below manual.

Product Features

Enjoy Playing

Connect electronic drum kit to drum amp.
Adjust sound level and choose different sound patterns. Play quietly with headphone connects. Enjoy playing alone and not disturb others.

Simplified Control Panel Design

Host machine control panel is designed to make everything simple, with only one volume knob, two drum sound switch buttons, and one metronome button.

Metronome Inside

With a click function, tempo adjustable.

Easy Assembly

Only 8 steps to assemble electronic drum kit. Please follow attached **ASSEMBLY DIRECTORY** to assemble your drum kit.

Drums Introduction

Crash Cymbal

Mark name: CR. 10" diameter. Made from high quality silicone and plastic. Positioned left top of drum kit. Crash cymbal has mute function.

Ride Cymbal

Mark name: RD. 10" diameter. Made from high quality silicone and plastic. Positioned right top of drum kit. Ride cymbal has mute function.

Hi-Hat

Mark name: HH. 10" diameter. Made from high quality silicone and plastic. Positioned left of drum kit.

Tom Drum 1, Tom Drum 2, Tom Drum 3

Mark name: T1, T2, T3. 7" diameter. Made from high quality silicone and plastic. High technology of shockproof design.

Snare Drum

Mark name: SD. 8" mesh pad, with double triggers. dynamics induction.


Bass Drum

Mark name: BD. Bass drum designed with only a pedal.

Hi-Hat Pedal

Mark name: HHP. Pedal made from high quality aluminum alloy. Play with Hi-Hat to make difference sound.

Remind: Each Mark Name marked on each pad and cymbal audio port, and also on each audio cable end.

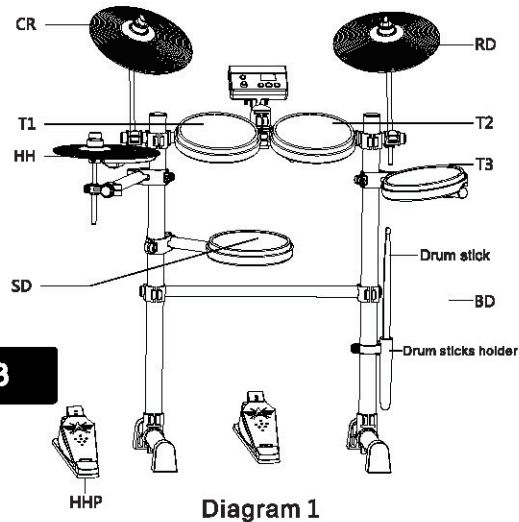

Basic Play Method

This is a brief introduction how to play with your both hands and both feet.

Play with Hi-Hat and Hi-Hat pedal

Stamp down Hi-Hat pedal, hit Hi-Hat, make short sounds 'tzi tzi ...', refer to Diagram 2.

Loose Hi-Hat pedal, hit Hi-Hat, make long sound 'tza...', refer to Diagram 3.

Play with Hi-Hat pedal alone, to make different strong or weak sound of 'tza, tza...' based on the speed and the strength of your each stamp on the Hi-Hat pedal.

Play with Bass Drum pedal

Make different bass drum sounds based on the speed and the strength of your each stamp on the bass drum pedal.

Play with Ride Cymbal

Refer to Diagram 4 tapping to make sound of 'ding, ding...'.
Refer to Diagram 5 rapping to make sound of 'dang, dang...'.
To mute the Ride Cymbal, use your fingers to press the cymbal edge black area.
Crash Cymbal can be also muted by the same way, refer to Diagram 6.

Play with Snare Drum

Refer to Diagram 7 to make sound of 'Da, Da...'.
Refer to Diagram 8 to make sound of 'Bang, bang ...'. side stick function only by TDX-15S.

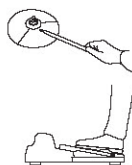


Diagram 2

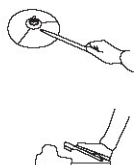


Diagram 3




Diagram 4

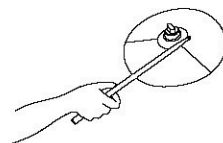


Diagram 5

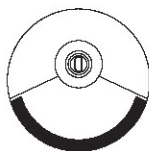


Diagram 6

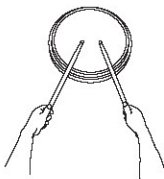


Diagram 7

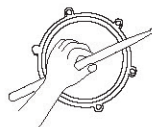


Diagram 8

Host Machine Introduction

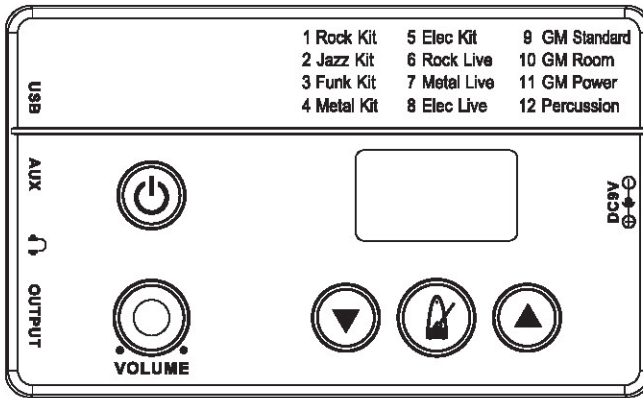


Diagram 9

 Press to turn On power / Press and hold to turn Off power.

"VOLUME" : Control the whole drum kit volume.

 : Metronome On / Off.

"▼" "▲" : Choose drum sound patterns. (to adjust tempo and beat when the click is on)

"USB" : USB MIDI port (refer to page 18 for details).

"AUX" : 3.5mm gauge audio cable input.

 : 3.5mm gauge earphone output.

"OUTPUT" : 3.5mm gauge audio cable output to drum amp.

"DC9V" : Connect to DC9V power adapter , negative tip.

How to Use

1. Power and Audio Cable Connection

Use the attached audio cable to connect OUTPUT of host machine to your drum amp. Or, connect your headphone to the earphone port of Host Machine. And then connect the power adapter to DC9V port of Host Machine.

2. Turn On/Off Host Machine

Press button  to turn On the machine. Press and hold the button  to turn Off the machine.

3. Turn On Drum Amp (if using a drum amp)

Turn on the drum amp and adjust the drum amp volume level. Hit the drum pad in the same time and adjust Host Machine volume control and the drum amp volume control to make a balance.









4. Choose Drum Sound Kit

The preset drum sound kit calls Rock Kit . Turn the Switch Knob clockwise or anti clockwise to choose different sound kits.

Drum kit sound patterns

1 Rock Kit	5 Elec Kit	9 GM Standard
2 Jazz Kit	6 Rock Live	10 GM Room
3 Funk Kit	7 Metal Live	11 GM Power
4 Metal Kit	8 Elec Live	12 Percussion

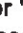5. Metronome Function

1. When power on, press button "  " into metronome mode, then press "  " and "  " to adjust the tempo;
2. Under metronome mode, press and hold button "  " for 3 seconds to choose beat mode (presets B-4), now press "  " or "  " button to adjust the beat(1~8);
3. After choosing the ideal beat, press "  " button, back to tempo adjustment mode, then press "  " again, back to choose different sound kits mode.

Pedals Adjust and Buttons Patterns Function

1. Pedals Adjust

Influenced by humidity and temperature, the sensitivity of pedals might differ. If this happened, use buttons pattern to adjust the sensitivity by following steps.

When power OFF, press and hold buttons "⏻ + 🥁" to enter pedal adjust mode. While the screen showing "bdF", stamp down the bass drum pedal and hold, "🥁" button continuously shows green color and orange color till the bass drum pedal setup finished, release the bass drum pedal. And then the screen showing "HHF", stamp down the hi-hat pedal and hold, "🥁" button continuously shows green color and orange color, and shows red color when system setup finished, and then the host machine log out the pedal adjust mode.

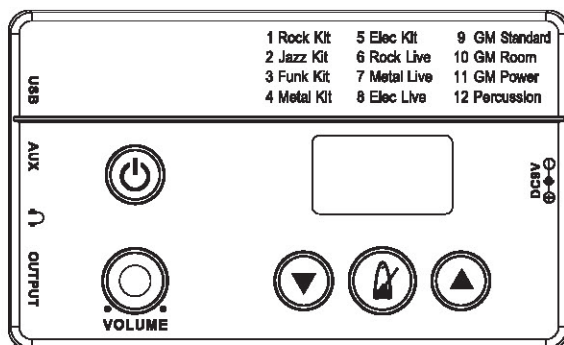


Diagram 10

2. Other Buttons Patterns Functions

1. When power OFF, press and hold buttons "⏻ + ▼" to enter USB software update function. The screen shows "UPG", use a USB cable connecting to a computer updating the host machine system.
2. When power OFF, press and hold buttons "⏻ + ▲" to enter Factory Reset. The screen shows "CLR".
3. When power ON, press and hold button "🥁" 3 seconds to refer system version information.

USB MIDI

Connect to your synthesizer or personal computer to play your MIDI music. MIDI (musical instrument digital interface) format list.

MIDI:

Function		Transmitted	Recognized	Remarks
Basic Channel	Default	10	1 ~ 8 & 10 ~ 16	
	Changed	x	x	
Mode	Default	x	Mode 3	
	Messages Altered	x *****	x *****	
Note Number		0 ~ 127 *****	0 ~ 127 0 ~ 127	
	True voice	*****	0 ~ 127	
Velocity	Note ON	0 ~ 127	0 ~ 127	
	Note OFF	x	0 ~ 127	
After Touch	Keyss	x	x	
	Channels	x	x	
Pitch Bend		x	0	
Control Change	0	x	0	Bank Select
	1	x	0	Modulation
	4	x	0	Foot Control
	5	x	0	Portamento Time
	6	x	0	Data Entry
	7	x	0	Volume
	10	x	0	Pan
	11	x	0	Expression
	64	x	0	Sustain Pedal
	65	x	0	Portamento On/Off
	66	x	0	Sostenuto Pedal
	67	x	0	Soft Pedal
	71	x	0	Resonance
	72	x	0	Release Time
	73	x	0	Attack Time
	74	x	0	Cut Off
80	x	0	Reverb Program	
81	x	0	Chorus Program	
90	x	0	Reverb Level	
91	x	0	Chorus Level	
120	x	0	All Sound OFF	
121	x	0	Reset All Controller *1	
123	x	0	All Notes OFF *1	
Program Change		x	0	
System Exclusive		x	0	
System common	Song Position	x	x	
	Song Select	x	x	
	Tune	x	x	
System Real Time	Clock	x	x	
	Commands	x	x	
Aux Messages	Local ON/OFF	x	x	
	All Notes OFF	x	x	
	Active Sense	0	x	
	Reset	x	x	

Mode 1 : Omni On, Poly Mode 2 : Omni On, Mono
Mode 3 : Omni Off, Poly Mode 4 : Omni Off, Mono

0 : Yes X : No
Notes *1 Except 9, 10 Channel

Specifications

Drum Kit Contents	crash cymbal, hi-hat, ride cymbal, tom drum * 3, snare drum, hi-hat pedal, bass drum pedal	
Drum Sound Kit Quantity	12	
Metronome	Tempo	40-240 BPM
	Beat	1- 8
Control Buttons	Power Button	
	▲ ▼ Button	
	Metronome Button	
	Main Volume Button	0-100
LCD Screen	3 digit numbers by tubes	
Interface	3.5mm gauge audio port	
	3.5mm earphone port	
	3.5mm aux port	
	USB B type MIDI port	
	DB25 drums signal cables	
	AC/DC adapter port	
Power Voltage	DC9V ⊕ ⊖ ⊕ ⊖	
Power Current	300mA	
Accessories	Electronic drum kit, Assembly Direction, Operation Manual, AC adapter, 3.5mm gauge audio cable - 1 piece, 3.5mm - 6.35mm gauge audio switch head, M6 tool - 1 piece, drum sticks - 1 pair	

Remind: Product information is subject to change without prior notice.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which there caever is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.



MADE IN CHINA